



OLIMPIC SAILS
wings for your dreams



OPTINAM 2019 BAHAMAS / © MATIAS CAPIZZANO



TUNING GUIDE 2020-1.0

SPAIN | PORTUGAL | USA | TURKEY | IRELAND | CROATIA



OLIMPIC SAILS
wings for your dreams

Welcome to the Olympic Sails tuning guide realized in cooperation with WeSail.

The purpose of this guide is to help you get the maximum speed out of your sail by finding the appropriate shape for the different wind conditions.

The first thing that is very important to understand, is that there is no magic recipe that will always work to get the most out of our sail. Even more, the right setting of the sail not only depends on the wind and waves, but also on the weight and technique of the sailor.

Because each sailor is different, and every day we face a new condition, we need to understand how the controls work and how they affect the shape of the sail in order to find that perfect combination that will make us sail faster.

Constantly adjusting the sail to the changes of the conditions is the key to maximize our speed.

LET'S TAKE A LOOK AT CONTROLS WE HAVE

SPRIT:

The sprit is the control that we most frequently adjust, and the one that we change more often during racing. Basically we need to adjust the sprit to take the creases from the top of the mast to the end of the boom when it's too loose, or when there are creases from the top of the sprit to the bottom of the mast when it's too tight.

This makes the setting of the sprit a little restricted to what the sail looks like.

But there is something very important that we need to know: The sprit is the control that has more influence on the leech. This is very important to understand, especially when we sail in light or very heavy winds.

RECOMMENDED RANGE:

Keeping the sail with no creases. In light air conditions, always better to have the sprit perfect on the lows and loose on the highs to prevent having the leech over tight.



TOO TIGHT



TOO LOOSE

VANG:

Controls the tension of the leech when we are going on a reach or downwind. When we go upwind, most of the times it doesn't have any tension, as the tension of the leech is controlled by the mainsheet.



LUFF TOO TIGHT



OLIMPIC SAILS
wings for your dreams

OUTHAUL:

Controls the foot of the sail making the overall shape of the sail flatter or deeper. This is a control that we are going to use a lot when working on our upwind boat speed. It can be easily changed in the water and provides a great tool to adjust the sail depending on the conditions.

RECOMMENDED RANGE:

The vertical creases that go from the boom sail ties up on the sail, should go no further than the first seam of the sail.

TOP AND BOOM PREVENTER:

These two lines will determine the tension of the luff. Making any of the two lines longer will increase the tension on the luff. Making them shorter will decrease it.

The Top one also prevents the mark from going off the bands. That is why for practical reasons: first we find the proper setting for the Top preventer, and then we play with the boom preventer to find the right luff tension for the condition we are sailing in.

The Bottom one is used to control the luff Tension.

RECOMMENDED RANGE:

Top Preventer: Keep the mark on the sail between the bands.



Bottom Preventer: From no turns, that means maximum tension, to 4 or 5 turns that means maximum loose.



MAIN SHEET:

It not only determines how far in we want the sail to be, but it also has a huge influence on the leech when we go upwind. This means that every time we trim in and out we are not only adjusting the position of the sail but also we are changing the shape of the leech.

SAIL TIES:

Sail ties are not something that we will be changing too much in the water, but it is necessary that they are set up properly on land, so that the sail works correctly. The limitation on this control is that according to Class Rules, the distance between the sail and the boom or mast is limited to 10 mm.

RECOMMENDED RANGE:

The distance between the sail and the rig should be between 0 to 8 mm, depending on wind intensity, rig and sail model (see the table below).



OLIMPIC SAILS
wings for your dreams

BASIC SET UP, SETTING THE SAILS ON LAND

The final setting of the sail always has to be in the water, once we know exactly what the conditions are; but still, it is important that on land we set up the sail for the conditions we expect, and we properly adjust some controls that are difficult to fix in the water.

RAKE:

The rake range “distance between back-top-of-mast to stern” should start from 280 cm (110 Inches) moving in front or back depending on sailor weight, weather conditions and sail model.

As we move the mast backwards the boat will tend to head up more, generating some lift out of the rudder. Also as we will need to use more rudder to keep the course, this will increase the pressure we will use, and generate drag!! So the conclusion is: You need to go to the water and find the proper Rake for you. It is easier to steer with the mast closer to 278 cm (109 Inches,) and it helps the boat point a little higher. But as the ability of the sailor increases, the mast can be moved forward to reduce the drag to a point somewhere around 283cm (111 Inch).

It is important that the rake is always on the range that we mentioned before. But after you make sure it is in that range, you need to realize that most of the times the speed wont happened just by moving the rake! There are a lot of adjustments you need to work on before moving the mast step. It's also important that you don't change the rake every race. You need to get used to sailing with a rake that seems good to you, and only change it when you are testing new set-ups.

SAIL TIES:


The sail ties are important for the performance of the sail so we can make some little adjustments in order to achieve a super fine-tuning.

All the Olimpic Sails have a Pre-Curved Luff. This means that the luff has a little curve on any condition. On the other hand, as we know, the mast bends in medium and heavy breeze but depending also on the rig used.

In light winds, the mast doesn't bend, that is why we let the sail ties at the ends a little loosened. This is also important so the sail can go from side to side easily.

When the wind increases the rig starts to bend so we must adjust the sail ties in order to maintain always the same shape of the luff curve.

It is important that we let the boom sail ties more loose than the ones from the mast. This will improve the performance of the sail, and will also help the sail go from side to side when we either tack or jibe. The maximum allowed distance by Class Rules is 10mm but we suggest not to go over 8 mm. **(check the table at the end of the tuning guide)**

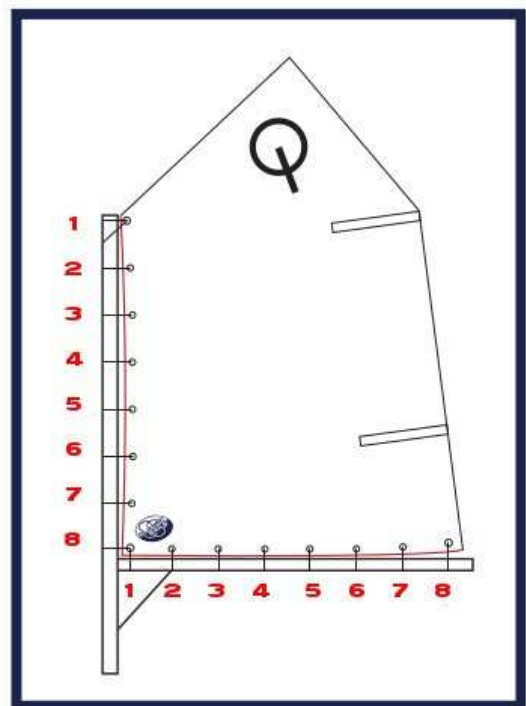



OLIMPIC SAILS
wings for your dreams

TOP PREVENTER:

It is extremely important that we properly set up the Top preventer on land, as it is harder to tie it in the water.

The goal is to have the top tie horizontal and the preventer tuned to have the sail band at 75% up between the two lines on the mast.





OLIMPIC SAILS
wings for your dreams

FINE TUNING: ON THE WATER ADJUSTMENTS

The tuning of the sail has to be done in the water, once we know what the conditions are, and when we can feel that the boat needs to go faster.

LIGHT AIR SETUP:

Flat Water:

On flat water, we want a sail that can make us point very high. As the water is flat, we don't have problems going over the waves, and we want to transform the power of the sail into pointing ability.

Luff Tension: We want to have a loose luff tension. This will move the draft backwards on the sail, giving us a flatter entrance and better pointing. Having some creases coming out of the sail ties is not a problem, as these are often called "speed creases".

Sprit: As we mentioned before, the sprit has a huge influence over our leech tension. That is why in light air conditions, we set up the sprit so it looks perfect in the lows, and a little too loose on the highs.

If the sprit is too tight, this will result in a very tight leech tension. In light air this is the worst thing that can happen. Always make sure in light air that the sprit is loose enough. A very small crease due to it being too loose, could improve the speed in extreme light conditions. This is the reason why it is so important to adjust our sprit every time we go from upwind to off the wind.

Outhaul: Although the wind is light, in flat waters, it is better to have the outhaul a little tighter. Having a flatter sail in this kind of condition will reduce the drag that the sail is producing, improving the flow of the wind. This will also improve our pointing ability too.

Vang: When there is light air, we never have the vang working on the upwind. The vang should be set up so it keeps the shape of the leech on the reach and downwind. But when we go upwind we should have no tension on the Vang line, so the control on the leech stays on the mainsheet.

Mainsheet: The mainsheet will control the leech tension on the upwind. We should adjust the mainsheet constantly in the lows and the highs. Every time we trim out, the leech opens up, and when we trim in, the leech closes on the top.

The proper trimming of the mainsheet will keep the Leech Tail flying, and will give us the best twist for that condition. Over trimming the sail will tighten up the leech too much and will slow down the boat. Under trimming the sail, will leave the leech too open, and will not let the boat go as high as it could.



OLIMPIC SAILS
wings for your dreams

Light air and Chop:

As the chop gets bigger, it is important that we power up the sail. Every time the boat goes through a wave, the boat speed decreases. We want a sail shape that will get us back to speed very quickly. We need acceleration.

Outhaul: Now we should start to loosen up the Outhaul to power up the sail, and get a shape with better accelerating abilities, that will work better on the chop.

Luff Tension: A little more tension on the luff will move the draft forward, giving a little more push on the sail that can help on the chop. We still want a loose Luff, because putting too much tension on the luff will flatten up the sail, and that will not help in these kinds of conditions.

Mainsheet: It is important to be constantly working on the trim to make sure that the boat can go as high as possible and, at the same time, accelerates when we slow down. Don't forget that by doing this we open and close the leech giving the right power to each moment.

MEDIUM AIR SETUP:

As the wind increases we need to tighten up the sprit and the vang. We still need to have power on the sail to go over the waves. In these kinds of conditions it is always good to remember that we can't go high if we don't start by going fast. That is why flattening up our sail to achieve better pointing results will not work in a lot of conditions.

Sprit: As we mentioned before, the sprit setup is limited to keeping the sail with no creases. But again it is important that we set up the sprit for the lows, and that we never have it too tight.

Outhaul: The outhaul needs to be set up depending on the wave conditions. The flatter the conditions, the more we can tighten it up. The feeling of the boat is very important to determine how much outhaul we need. If the boat is having problems going through the chop, we can try by loosening up the outhaul. If the boat can't go as high as the other boats, but we are going fast, then we can tighten up the outhaul to get better pointing.

Luff Tension: If we are sailing in flat water, some creases of our mast sail ties might work to make our boat go really fast. But as the waves get bigger, this sail will not help us at all to accelerate over the chop. Then we would need to take some twists of our bottom preventer to move the draft forward, giving more push to the sail, and a better shape to accelerate quickly.

Vang: In this kind of condition it is very important that we have enough vang tension so the leech remains when we go on a reach or downwind. If we don't have enough vang tension, as we get off the wind, we will see how the top of the leech opens up, and the sail loses all the power.



OLIMPIC SAILS
wings for your dreams

HEAVY AIR SETUP:

In these winds, our main priority is always to have our boat flat when we sail upwind. A flatter sail will help us achieve these results:

Outhaul: Having it tight will give us a flatter sail. The more we need to depower the sail, the more we should tighten up the outhaul. In overpowered conditions we should tighten the outhaul all the way to the back.

Luff Tension: In order to make the sail flatter, we will put more tension on the luff by taking the twists off the preventer. This will also move the draft forward giving us better push to sail over bigger waves, but mostly it will help us keep the boat flat by flattening up the sail.

Boom Preventer: Even in extreme conditions, when we want to have the sail as flat as we can; DON'T take the boom preventer out. If it is not attached, the vang will stop working properly as the hook will be able to move down, allowing the other end to move up, opening up the leech. This will make a boat uncontrollable downwind.

Sprit: If we have already tightened up the outhaul and the luff tension, and we still can't keep the boat flat, we can use the sprit to depower our sail. Instead of taking all the creases off the sail, we don't tighten it all the way, creating a big crease across the sail. This will open the leech and will seriously depower the sail.

Vang: Proper vang setup is essential to be able to get quickly on a plane when we go reaching. It is also very important as it makes the boat much more stable when going downwind, helping us surf the waves, and making jibes a lot easier. To get enough Vang on the sail we should:

- 1) Lift the dagger board as if you were sailing on a reach
- 2) Sail into a close haul and trim as much as we can. The boom should be almost touching the rail.
- 3) Grab the mainsheet with the same hand you are steering.
- 4) Reach forward, tighten your vang, and then let your sail out.



OLIMPIC SAILS
wings for your dreams

GETTING 100% OUT OF YOUR SAIL

Are we getting the most out of our sail?

As we have mentioned before there is not one “proper” way to set up your sail. So, how can you tell if you are setting the sail perfect for that condition?

Testing is the answer. The best and only way to see if your sail needs adjustments is by testing your boat speed against another sailor that has similar sailing skills.

It is very important that when testing, any changes on the sail are made one at a time, and they should be tested several times before making a new change. If you are adjusting one of the controls, the only way to see if this change had a positive or negative influence on your boat speed, is to leave all the other controls the same way, then test and compare your boat speed. If you change more than one control, and then you carry out the test, you will not know which of the changes is really affecting your speed.

So go out every day before racing, and speed test with someone in your team. This will lead you into your Top speed and get you ready for the race!

Happy sailing and stay tuned with our staff!

SAIL CARE

Your sails are built using the best materials available on the market and we check every roll before using it.

We suggest to take care of your sails to have, as longer as possible, the best performances from them, clean with fresh water, dry and roll them before the storage.

CONTACT OLIMPIC SAILS

Olimpic Sails strives in the development and improvement of our sails so if you have any comment or suggestion please don't hesitate to contact us.

Please call us or send an email to od@olisails.it.

Our experts:

Damir NAKRST | +385 (98) 402122 |

Dragan GASIC | +39 (348) 7420216 |

Luka VERZEL | +386 (40) 825592 |

Tine MOZE | +386 (31) 309501 |



OLIMPIC SAILS

OPTIMIST TUNING GUIDE

Model: XS-Race

Weight range: < 34 kg



WIND RANGE (KNOTS)	LIGHT Wind	MEDIUM Wind	STRONG Wind
RAKE	281 cm	283 cm	279 cm
SPRIT	Loose	Neutral	Loose
CUNNINGHAM	Neutral Luff	Neutral Luff	Tension on Luff
OUT HAUL	Loose	Neutral	Tight
VANG	Neutral	Tension on Vang	Tight
TOP SAIL TIES	3-4 mm	2 mm	0 mm
MIDDLE SAIL TIES	3-4 mm	1-2 mm	0-1 mm
BOTTOM SAIL TIES	2 mm	2 mm	1 mm

EQUIPMENT SUGGESTED

MAST	Optimax MK-3 o MK-3 Flex
BOOM	Optimax MK-3 o MK-4
SPRIT	Optimax MK-3 or MK-3 Flex
DAGGERBOARD	DSK FLEXIS or EXELIXIS



OLIMPIC SAILS

SAIL TIES TUNING GUIDE

Model: XS-Race

Weight range: < 34 kg



	LIGHT		FULL POWER		OVER POWER	
	MAST	BOOM	MAST	BOOM	MAST	BOOM
1	4	2	2	0	0	0
2	3	7	3	6	1	5
3	3	7	2	6	2	5
4	4	7	1	6	2	5
5	4	7	1	6	2	5
6	3	7	2	6	2	5
7	3	7	3	6	1	5
8	2	5	1	4	0	2



OLIMPIC SAILS

OPTIMIST TUNING GUIDE

Model: **RED**

Weight range: < 38 kg

WIND RANGE (KNOTS)	LIGHT Wind	MEDIUM Wind	STRONG Wind
RAKE	279 cm	280 cm	278 cm
SPRIT	Loose	Neutral	Neutral/Tight
CUNNINGHAM	Loose Luff	Neutral Luff	Tension on Luff
OUT HAUL	Loose	Neutral	Neutral
VANG	Neutral	Neutral	Tight
TOP SAIL TIES	2-3 mm	2 mm	1 mm
MIDDLE SAIL TIES	2 mm	3 mm	4 mm
BOTTOM SAIL TIES	2 mm	2 mm	1 mm

EQUIPMENT SUGGESTED

MAST	Optimax MK-3 or MK-3 Flex (only for very light sailors)
BOOM	Optimax MK-4
SPRIT	Optimax MK-3 Flex
DAGGERBOARD	DSK FLEXIS



OLIMPIC SAILS

SAIL TIES TUNING GUIDE

Model: **RED**

Weight range: <38 kg



	LIGHT		FULL POWER		OVER POWER	
	MAST	BOOM	MAST	BOOM	MAST	BOOM
1	5 to 6	1 to 2	4	7	1	1
2	4	4	4	4	2	4
3	2	7	4	4	2	4
4	0-1	7	5	4	2	4
5	0-1	7	5	4	2	4
6	2	7	4	4	2	4
7	4	7	4	4	2	4
8	5 to 6	8	4	1 to 2	1	5



OLIMPIC SAILS

OPTIMIST TUNING GUIDE

Model: **S-Race**

Weight range: **35-41 kg**



WIND RANGE (KNOTS)	LIGHT Wind	MEDIUM Wind	STRONG Wind
RAKE	278 cm	280 cm	276 cm
SPRIT	Loose	Neutral	Loose
CUNNINGHAM	Loose Luff	Neutral Luff	Tension on Luff
OUT HAUL	Neutral	Tight	Neutral
VANG	Loose	Tension on Vang	Tight
TOP SAIL TIES	2-3 mm	2 mm	1 mm
MIDDLE SAIL TIES	3-4 mm	6-8 mm	5-6 mm
BOTTOM SAIL TIES	2 mm	2 mm	1 mm

EQUIPMENT SUGGESTED

MAST	Optimax MK-3 or MK-3 Flex (only for very light sailors)
BOOM	Optimax MK-4
SPRIT	Optimax MK-3 Flex
DAGGERBOARD	DSK FLEXIS



OLIMPIC SAILS

SAIL TIES TUNING GUIDE

Model: S-Race

Weight range: 35-41 kg



	LIGHT		FULL POWER		OVER POWER	
	MAST	BOOM	MAST	BOOM	MAST	BOOM
1	5 to 6	1 to 2	4	7	1	1
2	4	4	4	4	2	4
3	2	7	4	4	2	4
4	0-1	7	5	4	2	4
5	0-1	7	5	4	2	4
6	2	7	4	4	2	4
7	4	7	4	4	2	4
8	5 to 6	8	4	1 to 2	1	5



OLIMPIC SAILS

OPTIMIST TUNING GUIDE

Model: M-Race

Weight range: **38-44 kg**



WIND RANGE (KNOTS)	LIGHT Wind	MEDIUM Wind	STRONG Wind
RAKE	280 cm	282 cm	278 cm
SPRIT	Loose	Neutral	Loose
CUNNINGHAM	Loose Luff	Neutral Luff	Tension on Luff
OUT HAUL	Loose	Neutral	Tight
VANG	Loose	Tension on Vang	Tight
TOP SAIL TIES	2-3 mm	2 mm	1 mm
MIDDLE SAIL TIES	3-4 mm	6-8 mm	5-6 mm
BOTTOM SAIL TIES	2 mm	2 mm	1 mm

EQUIPMENT SUGGESTED

MAST	Optimax MK-3
BOOM	Optimax MK-4
SPRIT	Optimax MK-3 or MK-3 Flex
DAGGERBOARD	DSK FLEXIS or EXELIXIS or DYNAMIIS



OLIMPIC SAILS

SAIL TIES TUNING GUIDE

Model: M-Race

Weight range: 38-44 kg



	LIGHT		FULL POWER		OVER POWER	
	MAST	BOOM	MAST	BOOM	MAST	BOOM
1	5 to 6	1 to 2	3	7	1	1
2	4	4	3	4	2	4
3	2	7	4	4	4	4
4	0-1	7	5	4	7	4
5	0-1	7	5	4	7	4
6	2	7	3	4	3	4
7	4	7	2	4	2	4
8	5 to 6	8	2	1 to 2	1	5



OLIMPIC SAILS

OPTIMIST TUNING GUIDE

Model: **RADIAL MEDIUM**

Weight range: **38-46 kg**

WIND RANGE (KNOTS)	LIGHT Wind	MEDIUM Wind	STRONG Wind
RAKE	282 cm	282 cm	282 cm
SPRIT	Loose	Neutral	Neutral/Tight
CUNNINGHAM	Loose Luff	Neutral Luff	Tension on Luff
OUT HAUL	Loose	Neutral	Neutral
VANG	Neutral	Neutral	Tight
TOP SAIL TIES	2 mm	1 mm	1 mm
MIDDLE SAIL TIES	2 mm	3 mm	4-7 mm
BOTTOM SAIL TIES	2 mm	1 mm	1 mm

EQUIPMENT SUGGESTED

MAST	Optimax MK-3
BOOM	Optimax MK-4
SPRIT	Optimax MK-3 or MK-3 Flex
DAGGERBOARD	DSK FLEXIS or EXELIXIS or DYNAMIIS



OLIMPIC SAILS

SAIL TIES TUNING GUIDE

Model: **RADIAL MEDIUM**

Weight range: 38-46 kg

	LIGHT		FULL POWER		OVER POWER	
	MAST	BOOM	MAST	BOOM	MAST	BOOM
1	5 to 6	1 to 2	3	7	1	1
2	4	4	3	4	2	4
3	2	7	4	4	4	4
4	0-1	7	5	4	7	4
5	0-1	7	5	4	7	4
6	2	7	3	4	3	4
7	4	7	2	4	2	4
8	5 to 6	8	2	1 to 2	1	5



OLIMPIC SAILS

OPTIMIST TUNING GUIDE

Model: **L-RACE**

Weight range: >45 kg



WIND RANGE (KNOTS)	LIGHT Wind	MEDIUM Wind	STRONG Wind
RAKE	282 cm	284 cm	280 cm
SPRIT	Loose	Neutral	Loose
CUNNINGHAM	Loose Luff	Neutral Luff	Tension on Luff
OUT HAUL	Loose	Neutral	Neutral
VANG	Loose	Tension on Vang	Tight
TOP SAIL TIES	2-3 mm	2 mm	1 mm
MIDDLE SAIL TIES	3-4 mm	6-8 mm	5-6 mm
BOTTOM SAIL TIES	2 mm	2 mm	1 mm

EQUIPMENT SUGGESTED

MAST	Optimax MK-4
BOOM	Optimax MK-4
SPRIT	Optimax MK-3 or MK-3 Flex
DAGGERBOARD	DSK EXELIXIS or DYNAMIS



OLIMPIC SAILS

SAIL TIES TUNING GUIDE

Model: **L-RACE**

Weight range: >45 kg

	LIGHT		FULL POWER		OVER POWER	
	MAST	BOOM	MAST	BOOM	MAST	BOOM
1	5 to 6	1 to 2	3	7	1	1
2	5	4	3	4	3	4
3	2	7	4	4	5	4
4	0-1	7	5	4	8	4
5	0-1	7	5	4	8	4
6	2	7	3	4	4	4
7	5	7	2	4	2	4
8	5 to 6	8	2	1 to 2	1	5